

# LifeSmart® Simply Brilliant

Motion Sensor User Guide V1.0
Setting up your Motion Sensor
Model. LS085WH

## Motion Sensor

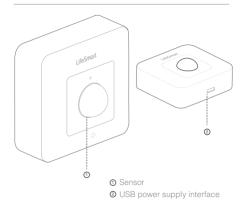

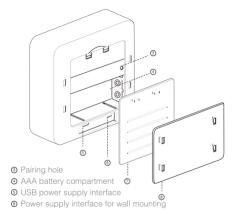

- Battery compartment cover
- Mounting plate

## PRODUCT INTRODUCTION

The LifeSmart's Motion Sensor detects movement. Upon detection, notifications will be sent to your mobile devices via the LifeSmart App. Alternatively, a light can be triggered upon entering a room that is too dim. If connected with LifeSmart Smart Home Wi-Fi Camera, you can trigger a snap shot that can be directly be sent to your mobile device.

## IN YOUR PACKAGE

Motion Sensor 1 AAA battery 2


Mounting plate 1

Battery compartment cover 1

# **SPECIFICATIONS**

Size	70*70*34mm
Weight	46g (without batteries)
Material	ABS
Battery type	AAA
Standby time	2 years
Operating voltage	DC 3V
Operating temperature	-5~45°C
Operating humidity	5~90%
Wireless protocol	CoSS
Wireless distance	200m (open field)

## **SENSING RANGE**

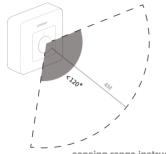

# sensing range instructions

Sensing distance 4m Sensing angle 120° (three-dimensional)

## SET UP

# LifeSmart's Motion Sensor needs to be paired with Smart Station to join the smart system.

- 1. Open the battery compartment cover and insert the AAA batteries.
- After configuration of the smart station, click "+" on the app home page, then click "Add Device", select "Motion Sensor", enter paring mode.
- 3. Follow the instruction on the app to finish paring.
- If a time-out error occurs, please repeat step 1-4 until it's successfully paired.
- Motion Sensor has features such as interaction with other smart devices. Please follow the instructions on the app to discover.

## WARRANTY DESCRIPTION

Thank you for purchasing this LifeSmart product. In order to protect your rights, please read the following content carefully: The warranty period of our company's products is one year from the date of purchase or longer if local laws impose a longer minimum term, in which case the minimum term is the warranty period. During the warranty period, any faults caused by the product itself or for quality problems that arise under normal usage, LifeSmart will provide a free replacement.

## ATTENTION

The following conditions are not covered by the warranty:

- Product failure or damage caused by installation, use, and maintenance that is not in accordance with the product
- Products beyond the warranty period;
- · Products that have the barcode tampered with or removed;
- Devices that have been tampered with or customized outside of LifeSmart Terms Of Service as on the LifeSmart App and website:

## ATTENTION

- User-caused damage, such as inappropriate voltage input, high temperature, accidental spillage, physical damage, etc;
- Product failure or damage caused by force majeure such as earthquakes, fires, or floods;
- Product failure or damage caused by other problems except the product itself.

User support e-mail address support@ilifesmart.com

www.ilifesmart.com



#### DECLARATION

LifeSmart is a trademark of Hangzhou LifeSmart Technology Co., Ltd. As for the trademarks, product logos and product names from other companies presented within this manual, they are possessed by their own right holders. Without our written permission, no entity or individual shall extract, copy or disseminate in part or the whole of the manual contents in any form. Due to product version upgrades or other reasons, content of this manual may change. Our company reserves the right to change the contents of this manual without any notice.

This manual is used only for instructional purposes. We strive to provide accurate information in this manual, but we are not able to ensure that the content of this manual is current. Statements, information and advice in this manual do not constitute any expressed or implied assurance. Updated manuals are available on our website at www.ilifesmart.com or by contacting our team.

### DECLARATION

#### DECLARATION OF CONFORMITY

Hereby, LifeSmart declares that the radio equipment type is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: <a href="http://global.lifesmart.com/ce/docs/">http://global.lifesmart.com/ce/docs/</a>



Notice: This device may be used in each member state in EU.

## **WEEE Directive Compliance**

Device labelled with this symbol should not be disposed with other household wastes. It shall be handed over to the applicable collection point for the recycling of waste electrical and electronic equipment.



Manufacturer: Hangzhou LifeSmart Technology Co., Ltd.
Address: 10-11th Floor, Building A, SUPCON Information, 352 Binkang Road,
Binjiang District, Hangzhou, Zhejiang, CHN

